

ACCESSORY SETUP INSTRUCTION

CARGO BASKET ASSY -- PN 9DSV-802100-6000

VALID FOR: MY2020 and Newer CFORCE 600 / 625, CFORCE 600 / 625 TOURING

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


MEANING OF SYMBOLS

 - Indicates information with more details or tips.

 - Indicates information of warning or danger.


PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	CARGO BASKET ASSY	9DSV-802100-6000	1	Picture is for structure reference only.
2	PLASTIC CARGO BASKET	9DSV-802101-6000	1	
3	CF CONNECT CLAMP	9DS#-809000-6000	4	

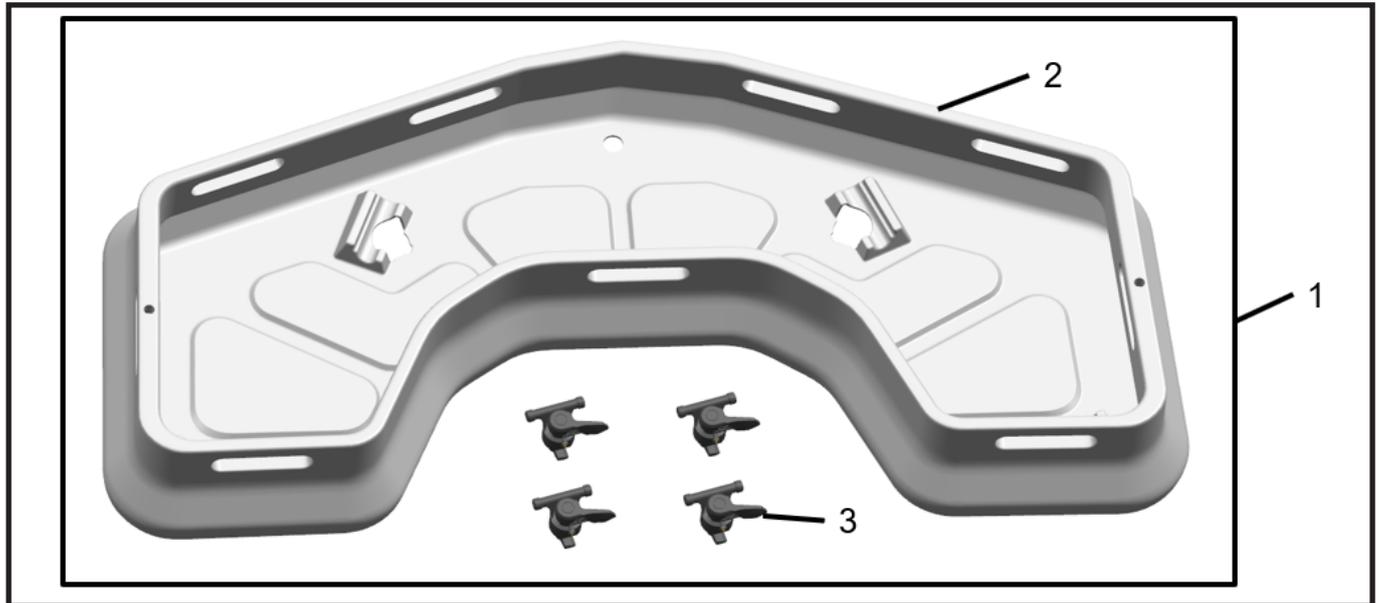


TOOL LIST:

ITEM	DESCRIPTION	QTY.	REMARK
1	PROTECTIVE GLOVES	1	Recommended tools.
2	5mm ALLEN WRENCH	1	

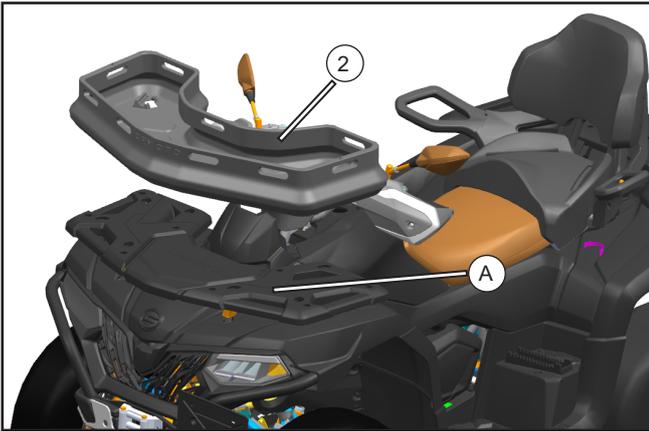ASSEMBLY and INSTALLATION

// Place the cargo basket (2) on the front rack cover (A) of the vehicle , and align 4 CF Connect clamp holes.

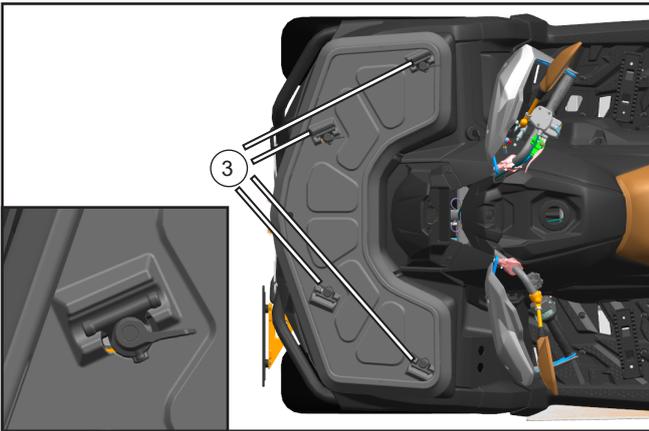

// Install the CF Connect clamps (3) and tighten them by turning the lever clockwise.

i » The CF Connect clamping force can be adjusted using a 5mm allen wrench.